



iBook G4 14" 1.42 GHz LCD Cover Replacement

Internal Prerequisite.


Written By: Andrew Bookholt



INTRODUCTION

Internal Prerequisite.

Step 1 — LCD Cover

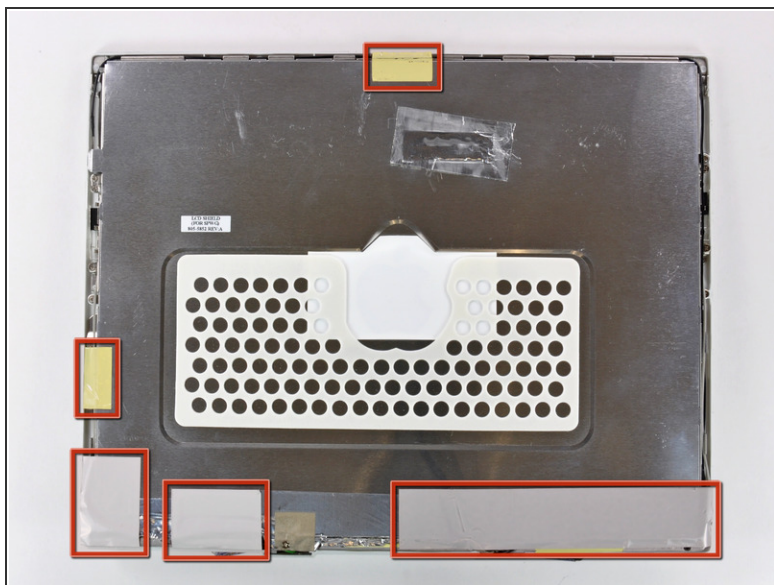


- Remove the pieces of readily removable tape from around the perimeter of the display.
- Carefully remove the aluminum tape covering the display data cable connection.

Step 2




- Remove the single screw inserted through the piece of EMI tape near the bottom edge of the display.
- Use the tip of a spudger to remove the small washer under the screw you just removed.

Step 3

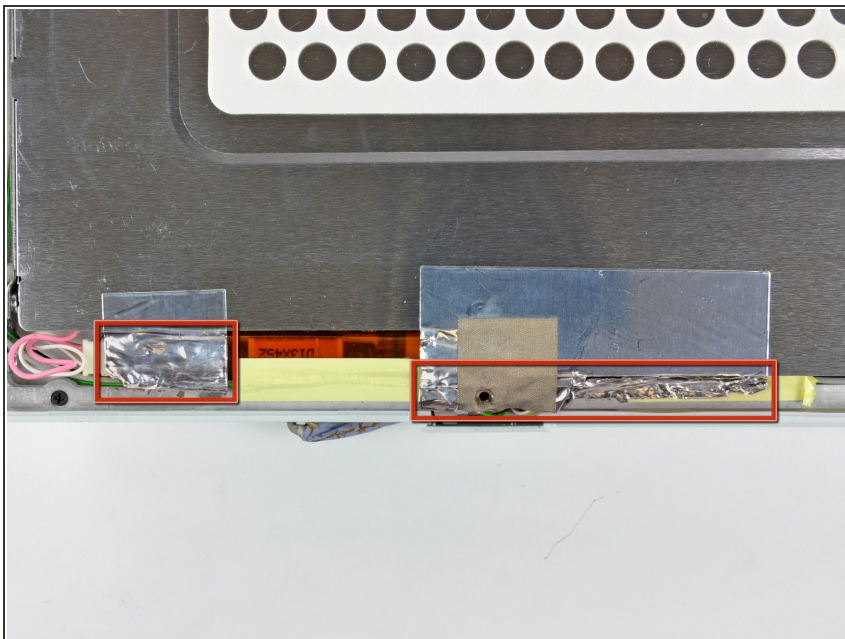

- Peel the aluminum/EMI tape off the cast aluminum frame of the clutch hinges.
- ⓘ It is not necessary to peel the tape off the thin steel LCD cover.

Step 4

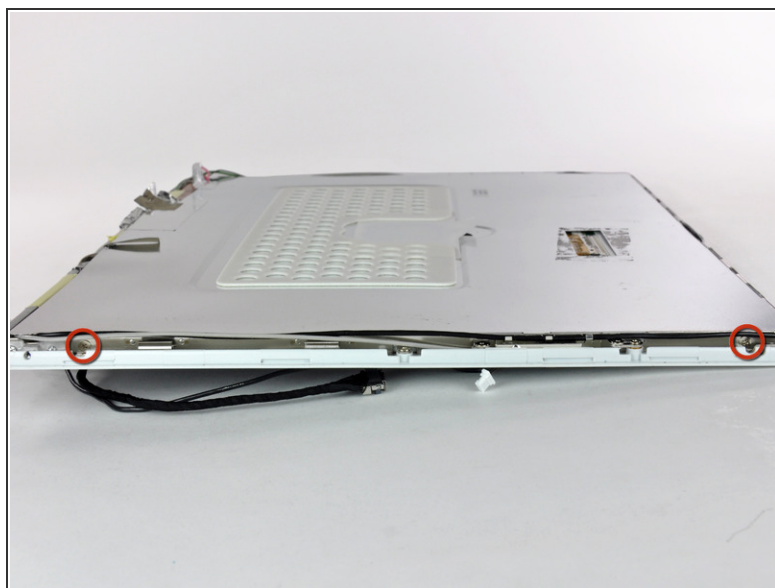

- Remove the two Phillips screws securing each side of the LCD to the clutch hinge frame (four screws total).

Step 5



- Lift the thin steel LCD cover off the LCD.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-13 09:40:47 PM.